

# freetalk®

**FREETALK**

Wireless Stereo Headset

**TALK-5192**



ENGLISH

# TALK-5192 Acoustic Headset

USB Plug & Play 2-Way Interactive CD-Quality Audio

## INSTRUCTION MANUAL

1. Certification and Safety Approvals
2. Unique Features
3. Product Accessories
4. Specification
5. Parts Introduction
6. User Guide Symbols
7. Getting Started
8. Troubleshooting
9. Important User Information
10. Warranty conditions

### 1. Certification and safety approvals

5192 is the wireless headset that delivers high quality 2.0-channel stereo audio with extra sound clarity and soft, deep bass effects. It provides a voice back channel that allows you to talk in conjunction with any kinds of PC voice applications. Examples of such applications include Skype, MSN, on-line gaming, and more. With the high performance audio and the unique feature set, KM-2 brings you a great value. To start, we like to introduce to you the important certification and safety approvals on this headset.

### 2. Unique features

Unique 2.0-Channel design - Each ear cup contains specially designed speaker driver to deliver extra audio clarity. USB Plug-and-Play wireless headset that supports PC music/game sounds and back-channel voice simultaneously, no need to switch back and forth. USB Dongle (Transmitter) direct plug-in to the PC for instant use of VoIP, on-line game, DVD, and all kinds of entertainment running Windows 2000/XP/Vista. Easy of use, no software installation needed. Long standing use, up to 5.5 hours of continuous listening time per charge. Easy charging through dongle DC out. Microphone switch on/off control. 30 to 45 feet distance for effective use. This manual includes

## 3. Product Accessories



PC USB Wireless Headset

PC USB Dongle

## 4. Specification

Model	5192
Wireless Technology	WiStereo™ for advanced 2-way digital transmission in the 2.4 GHz frequency band
Listen Time (per charge)	Up to 5.5 hours
Standby Time	Approximately 3 months
Charge Time (full charge)	Approximately 2.5 hours
Distance of Use	30 ~ 45 feet
Headset Weight	122 g
USB Dongle Weight	13 g
Charging Method	Through Dongle DC Out
Battery Type	Lithium Polymer
Headset Speaker	40mm Neodymium
Frequency Response	20Hz~20,000Hz
Audio Quality	(perfect for all music, game, and voice) Uncompressed audio for music (CD-quality) and voice (extra clarity)
Distortion (T.H.D.)	<0.08% (professional grade audio performance)

## 5. Parts Introduction



### 1- VOL + / VOL -

Press to increase the headset volume.  
Press to decrease the headset volume.

### 2- LED Indicator

A red indicator represents power functions.  
A green indicator represents signal connections.

### 3- Pair / Pick Up / Hang Up

Press pair button to connect the wireless headset and the USB Dongle.  
Answer SKYPE---Press pair button to answer the call  
Hang up SKYPE---Press pair button to end the call

### 4- Power On/ Off

Press this button to control power on/ off.

### 5- DC-IN Port

Connect the cable Connect the DCIN from dongle for recharging.

### 6- Microphone

mic on: Press the "power button" 0.3 -3 seconds  
mic off: Press the "power button" 0.3 -3 seconds

### 7- Reset

Press to reset the headset, in case this headset is not functioning properly.

## 6. User Guide Symbols

### Steady Red light



\*The headset is charging

### Steady green light



\*Devices are paired

### Flashing green light



\*Devices are awaiting for pairing

\*Devices are not paired

\*Green & orange flashing alternately: mic off

### ① VOL + / VOL -

### ② LED Indicator

### ③ Pair / Pick Up / Hang Up

### ④ Power On/ Off

### ⑤ DC-IN Port

 
### ⑥ Microphone

### ⑦ Reset

## 7. Getting Started

### Charging

Computer

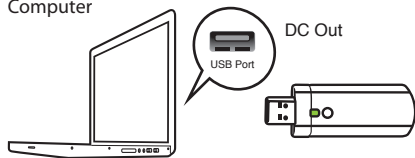

**First time use:** Charge 4 hours before using the headset.

Plug into charge

Unplug when finished




**Regular use:** Charge the headset approximately 2 hours if the battery was completely used up. Once the battery is off, you can charge the battery thorough the cable and listen at the same time.

### The headset is charging

 \*Steady red light is turned on when the headset is fully charged.




### Connecting USB Dongle

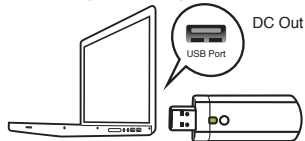

Connect the USB Dongle with PC for signal transmission.

### Turno on/off the headset

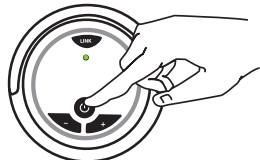 

- Turn on: press the power button
- Turn off: press the power button for at least 3
- Steady red light is turned off when the headset is fully charged.
- Mic on: Press the "power button" 0.3 - 3 seconds

- Mic off: Press the "power button" 0.3-3 seconds

- press PAIR button for 5 seconds for pairing (press PAIR button for 5 seconds at dongle side at the same time)
- PAIR button combined with SKYPE Answer and End
- Press and release momentarily for answer SKYPE
- Press PAIR button for 2 seconds for end SKYPE

## 9. Important User Information

### Handling the headset

Do not bend, drop, crush, puncture, incinerate, or open the headset.

### Repairing the headset

Never attempt to repair the headset yourself. The headset does not contain any user serviceable parts. For service information, choose the headset help from the warranty card. The rechargeable battery in the headset should be replaced only by authorized service providers.

### Unplug the USB charging cable if any of the following conditions exist

- The USB cable or plug has become frayed or damaged.
- The USB cable has been exposed to rain, liquids, or excessive moisture. You suspect the headset needs service or repair.
- You want to clean the headset.

### Avoiding hearing damage

Permanent hearing loss may occur if a headset is used at high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected.

### Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use the headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn down the volume if you can't hear people speaking near you.

## Maintaining battery life

Due to the physical nature of battery, the charging time may become longer and the actual capacity of battery may decrease. If you have any questions regarding the replacement of the built-in battery, please contact our service center.

## 8. Troubleshooting

### No signal connection to the headset

Make sure the headset is charged and the USB Dongle is properly connected to the PC. Within the range of signal coverage, power on the headset again.

### The headset is automatically switched off

The battery is too low. The indicator light on the headset is off.

### Unexpected behavior

Reset the headset. (see p.5)

### No audio at the headset

- Check the headset and the computer volume control. Make sure they are not in the lowest volume level or muted.
- Check the pair status of the USB Dongle and the headset. Make sure two devices are paired properly.
- Check if the PC Media Player is properly installed, and audio file is playable.
- The listening party can not hear you over the internet. Check if the microphone switch is on.

## Warranty conditions

- Our products have a 3 year manufacturer's warranty, which is effective from the date of purchase.
- If there is a fault, return the product to your dealer and include an explanation of the fault, the proof of purchase and all the accessories.
- Please refer to the web site [www.freetalk.me](http://www.freetalk.me) for missing components, such as the instruction manual, software or other components.

Excluded from the warranty:

- Damage caused by accidents or disasters, such as fire, flood, earthquakes, war, vandalism or theft.
- Incompatibility with other hardware/software which is not stated in the minimum system requirements.
- Under no circumstances will the manufacturer be held responsible for any incidental or consequential damage, including the loss of income or other commercial losses resulting from the use of this product.